


Sitting in the pilot's seat, the heater normally mounts on the right side of the oil sump with the thermostat facing the propeller.

Picture 1. Model 441

Picture 2. Model 440

1.

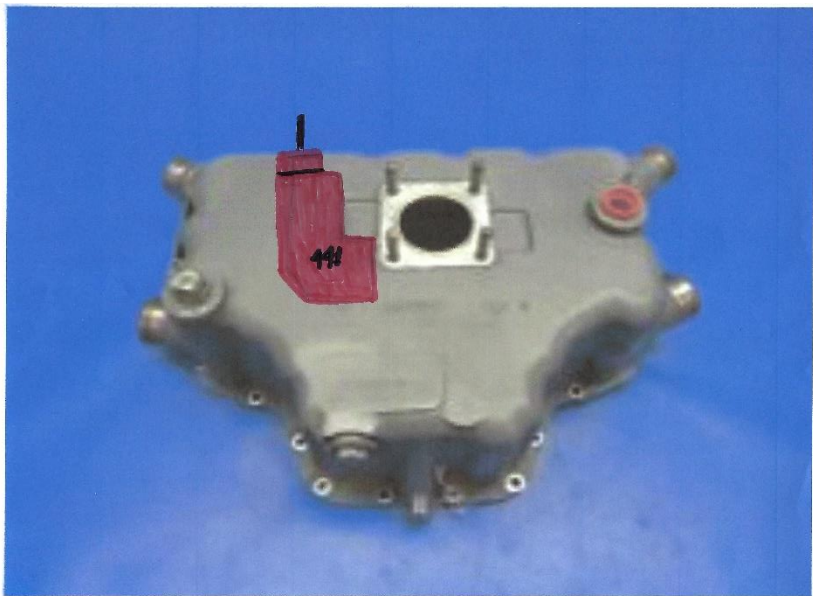

2.

